




Antenna type ARL470S/F790XZ

cod. ARL460R870 UHF BROADBAND DIRECTIONAL ANTENNA

470 ÷ 790 MHz

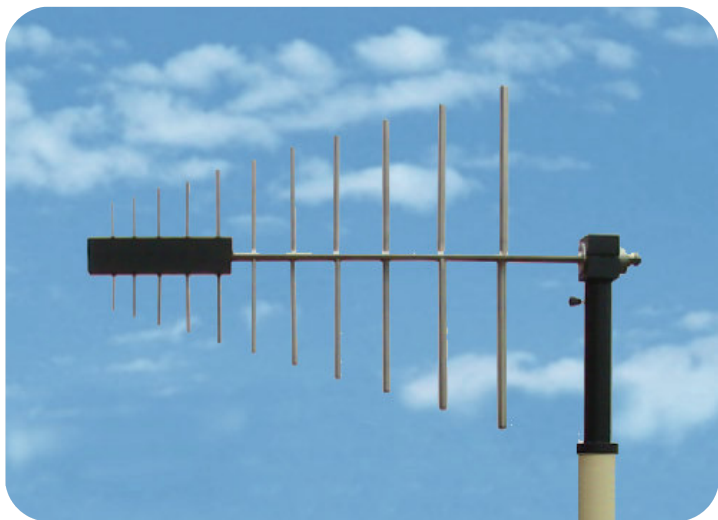

ELECTRICAL DATA

Frequency range	MHz	470÷790
Bandwidth	MHz	320
Gain typ.	dBi	7.5
Return loss	dB	≥ -14
VSWR		≤ 1.5:1
Nominal impedance	Ω	50
Polarization	Ω	V/H
H beamwidth 470 Mhz	-3 dB	120°
H beamwidth 600 Mhz	-3 dB	130°
H beamwidth 770Mhz	-3 dB	140°
E beamwidth 470 Mhz	-3 dB	110°
E beamwidth 600 Mhz	-3 dB	100°
E beamwidth 770 Mhz	-3 dB	120°
Max Power	W	200 W
Connector		Nf
Lightning protection	All metal parts are D.C. grounded	

MECHANICAL DATA

Dimension length	mm	580Xh350x40
Elements numbers		11
Weight without clamp	kg	1.4
Wind surface	m ²	Front 0.01 side 0.05
Front wind load	Kg	0.15 (25 m/s)
Side wind load	Kg	1 (25 m/s)
Mounting +/- 90°	mm	standard polarizer Ø 30

MATERIALS


Anticorodal aluminium - Brass - Teflon -Stainless steel
- Polyvinyl chloride - RoHS compliance

ACCESSORIES


SUPIS01	Isolation fiberglass pole Ø 35 x 1000
BAG470S790	Transport bag

ORDERING AND PACKAGING INFORMATIONS


ARL470S790XZ	With unscrewed elements
ARL470F790XZ	With fixed elements
PACKAGING mm.	600x350x200 / weight 3 Kg without clamps

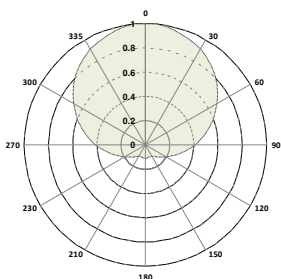


470 Mhz E plane

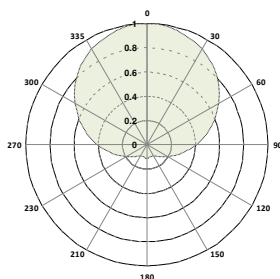


470 Mhz H plane

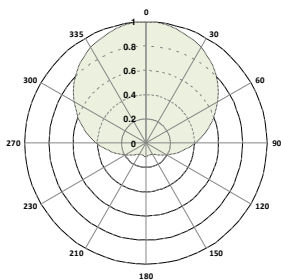


600 Mhz E plane

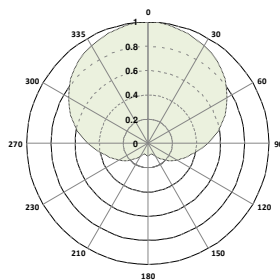



600 Mhz H plane

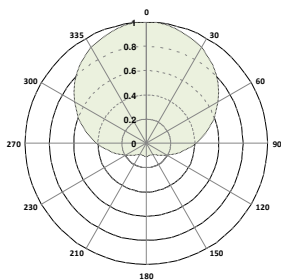

790 Mhz E plane

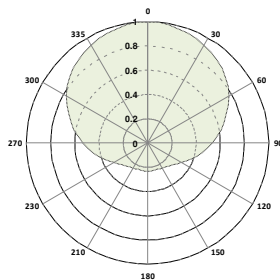

790Mhz H plane

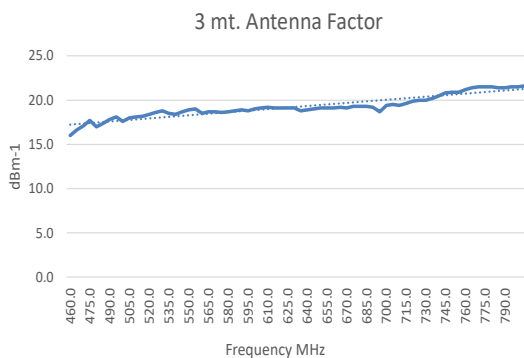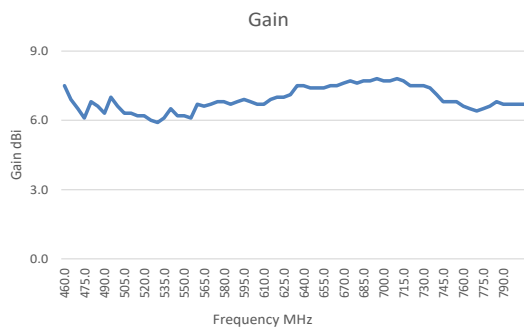

In relazione alle normative in materia di responsabilità sui prodotti, segnaliamo che nel caso di utilizzo delle nostre antenne in condizioni operative particolari, quali ad esempio forti sollecitazioni dinamiche dovute a vento, vibrazioni o deformazioni delle strutture di sostegno, si possono verificare rotture del prodotto stesso e/o la caduta a terra. L'installatore che deve essere altamente qualificato, deve conoscere le normative nazionali di sicurezza in vigore, deve seguire le informazioni contenute nelle nostre istruzioni, deve verificare sempre l'adeguatezza del prodotto stesso alle condizioni operative del sito di installazione e deve controllare l'installazione operando la manutenzione periodica dell'impianto. ---- In relation to the laws concerning product liability, we notify you that in case you use our antennas in severe operative conditions such as, for example, strong wind, vibrations or distortions of the support structure, the product can break and/or fall down. The person who install the product must know the national security law in force, must follow the product instructions, must check that the product is compatible with the installation site and must control the installation with periodical maintenance.

Updating
01/2012

PROTEL reserves the right to amend or modify the products described in this brochure at any time without prior notification in order to improve the design and supply the best possible product.

WWW.PROTEL.IT Via Magellano 3ab6-20090 CESANO BOSCONI (MI) protel@protel.it

copyright©

